


**Sulfur compounds and VOC monitoring in ambient air**  
ppm (for hygiene) / ppb (for odor)

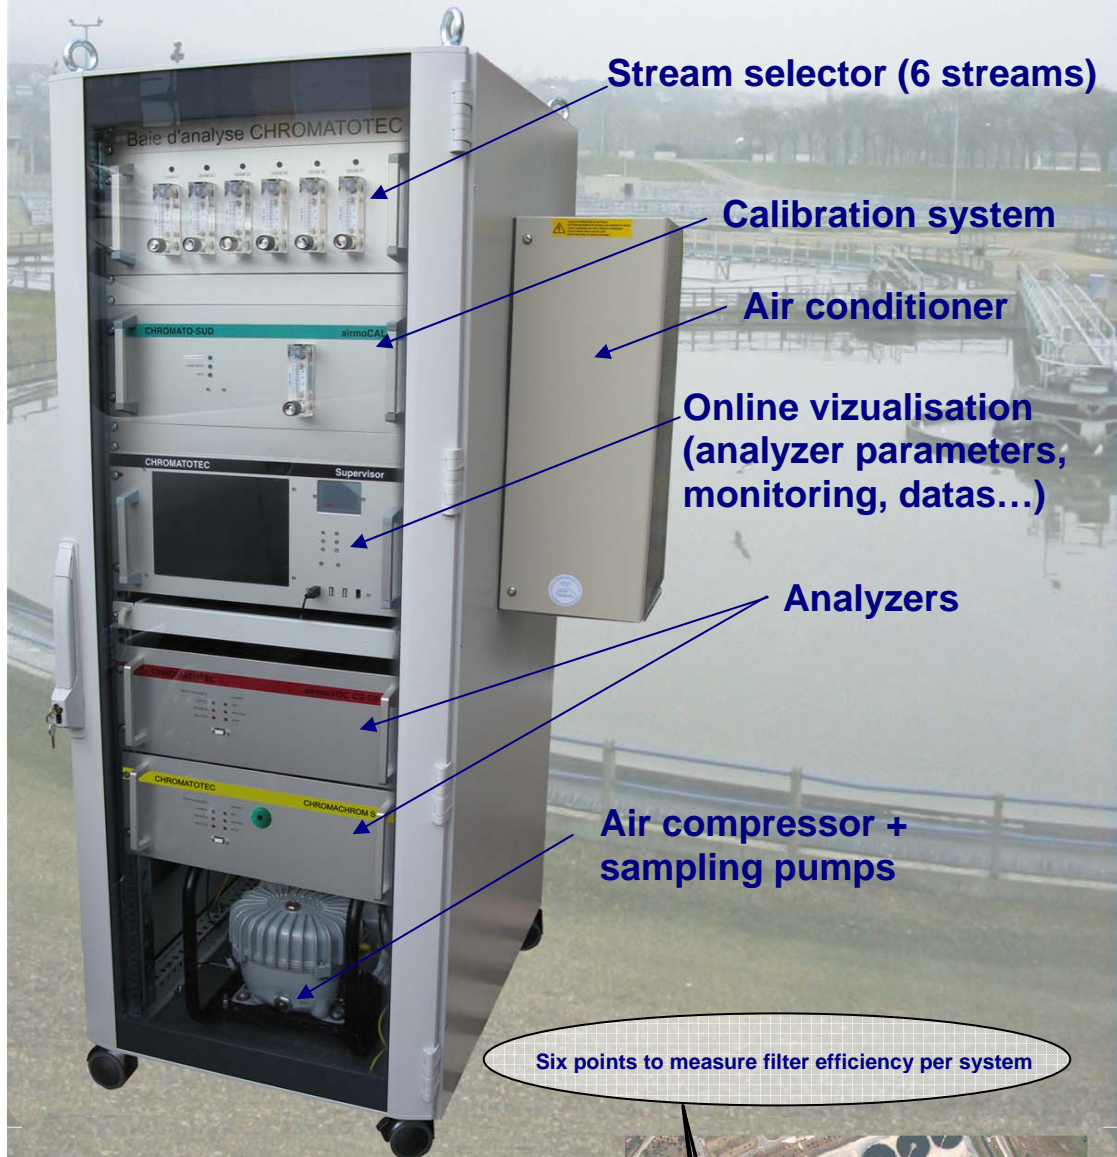


Six points to measure filter efficiency per system

**Two international norms**

ISO 6326/2 & DIN 51855/7

Analytical systems are located at the center of the main building

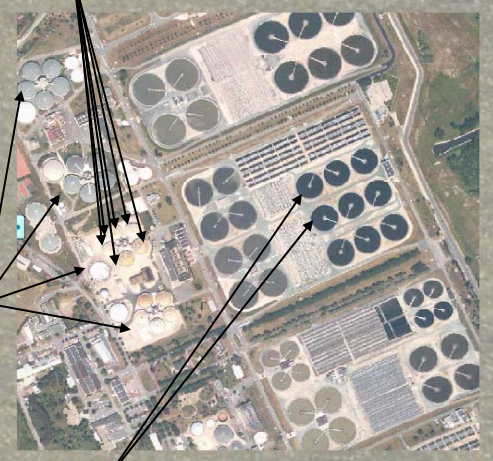

Primary setting tanks located just before the digesters